

**Smaller Assemblies and Components of BMP (UTD-20), T72 (V46-6) and T90 (V92S2)**

Sr. No.	NAME	PART NO.	SALES CODE	USED ON TANK/ENGINE
1	Valve	765-08-SB305	FGS-00180	BMP 1 / BMP 2
2	Stowage Rack	675-67-SB12	FGS-00220	BMP 1 / BMP 2
3	Injector Spring	20-17-15	FGS-00191	Engine UTD-20 (BMP)
4	Bushing	SB 20-15 664 1	FGS-00137	Engine UTD-20 (BMP)
5	Bearing Bush	20-01-109-2	FGS-00124	Engine UTD-20 (BMP)
6	Bearing Bush	20-01-105-1	FGS-00123	Engine UTD-20 (BMP)
7	Bushing	20-01-160-4	FGS-00106	Engine UTD-20 (BMP)
8	Spacer	SB 20-60-07	FGS-00073	Engine UTD-20 (BMP)
9	Elbow	20-06-130	FGS-00068	Engine UTD-20 (BMP)
10	Spring (Plunger)	20-27-79	FGS-00063	Engine UTD-20 (BMP)
11	Large Valve Spring	20-06 65	FGS-00010	Engine UTD-20 (BMP)
12	Valve Guide	20-06-17-1	FGS-00133	Engine UTD-20 (BMP)
13	Valve Slide	172.66.234-1	FGS-00168	T72 and T90 Tank
14	Bushing	172.25.068	FGS-00109	T72 and T90 Tank
15	Body	175.47.014-A	FGS-00094	T72 and T90 Tank
16	Pressure Reducing Valve	ADY3-05 SB	FGS-00066	T72, T90 & BMP Tanks
17	WASHER 8T	353-24	FGS-00003	T72, T90 & BMP Tanks
18	Bush R1	3305-54	FGS-00226	Engine V46-6 , Engine V92S2
19	Bush of Connecting Rod Big End	304-20-5 R2	FGS-00197	Engine V46-6 , Engine V92S2
20	Disc Washer	306-117	FGS-00134	Engine V46-6 , Engine V92S2
21	Valve Seat	306-22-1	FGS-00105	Engine V46-6 , Engine V92S2
22	Bush Of Connecting Rod Big End	304-20 5	FGS-00101	Engine V46-6 , Engine V92S2
23	Valve Guide	306-17-12	FGS-00100	Engine V46-6 , Engine V92S2
24	Casing Of Inclined Shaft LH	306.36.2	FGS-00096	Engine V46-6 , Engine V92S2
25	Casing of Inclind Shaft LH	306-36-1	FGS-00093	Engine V46-6 , Engine V92S2
26	Inclined Shaft Case RH	306-20-1	FGS-00091	Engine V46-6 , Engine V92S2
27	LH Inclined Shaft Casing	306-36-4	FGS-00090	Engine V46-6 , Engine V92S2
28	Larger Spring	306 - 65 2 A	FGS-00062	Engine V46-6 , Engine V92S2
29	RH Inclined Shaft Casing	306-20-4	FGS-00029	Engine V46-6 , Engine V92S2
30	Bi-Metal Ring	303-08-5	FGS-00028	Engine V46-6 , Engine V92S2
31	Valve Seat	306-23-1	FGS-00026	Engine V46-6 , Engine V92S2
32	Starting Valve Bush	306-19 2	FGS-00018	Engine V46-6 , Engine V92S2
33	Valve Spring Smaller	306-66 2 A	FGS-00015	Engine V46-6 , Engine V92S2
34	Gasket	303-08-8	FGS-00013	Engine V46-6 , Engine V92S2
35	End Packing Crank Shaft	SB 3305-27-3	FGS-00012	Engine V46-6 , Engine V92S2
36	Bush for Con. Rod Small End	304-13-3	FGS-00005	Engine V46-6 , Engine V92S2
37	Valve Guide	306-17-5	FGS-00002	Engine V46-6 , Engine V92S2
38	Bushing	514-33	FGS-00240	Engine V46-6 , Engine V92S2
39	Bush	504-13	FGS-00227	Engine V92S2
40	Pin (Shaft) With Lever	SB 315-608-6	FGS-00141	Engine V92S2
41	Lever Roller	SB 315-608-1	FGS-00095	Engine V92S2
42	Injector Spring	317-15-15	FGS-00051	Engine V92S2
43	Bush	504-13(R1)	FGS-00107	Engine V92S2
44	Bush	3338-432 1	FGS-00103	Engine V92S2
45	Pin Type Heater Plug Assy	1737-40-000_SB	FGS-00132	Engine V92S2
46	Bush	3308-68	FGS-00110	Engine V92S2
47	Rotary Anglepiece Reducing Valve	SB 420-57 A	FGS-00072	Engine V92S2